

MIDI DVD KARAOKE FUNCTIONS - QUICK REFERENCE GUIDE

1. Song Search – the 3 methods

With screen menu

- ① Press the **TITLE** key to open the screen menu in stop or playback mode.
- ② Select the language of the desired songs by pressing the **Blue** ⇐ ⇨ keys.
- ③ Select the Alphabet or the First Character of the desired song by pressing **ALPHABET** ▲ ▼ keys.
- ④ Locate the desired song in the screen menu by pressing the **PAGE** ▲ ▼ keys or **general** ▲ ▼ keys.
- ⑤ Once you have found the desired song, start or book the song by pressing the **PLAY** or **ENTER** keys.
- ⑥ If want to book other songs, please repeat steps 2 to 5.
- ⑦ To exit the screen menu, press the **TITLE** key.



With singer search

- ① Press the **TITLE** key to open the screen menu in stop or playback mode.
- ② Select the language of the desired singer by pressing the **Blue** ⇐ ⇨ keys.
- ③ Press **SINGER** to change the screen menu to the singer name list.
- ④ Select the Alphabet or the First Character of the desired singer by pressing the **ALPHABET** ▲ ▼ keys.
- ⑤ Locate the desired singer in the screen menu by pressing the **PAGE** ▲ ▼ keys or **general** ▲ ▼ keys.
- ⑥ Once you have found the desired song from the singer, start or book the song by pressing the **PLAY** or **ENTER** keys.
- ⑦ If want to book other songs, please repeat steps 2 to 6.
- ⑧ To return to the song list screen menu, press **SINGER** again.
- ⑨ To exit the screen menu, press the **TITLE** key.



With word search

- ① Press the **TITLE** key to open the screen menu in stop or playback mode.
- ② Select the language of the desired song or singer by pressing the **Blue** ⇐ ⇨ keys.
- ③ Press **W.SEARCH** to enter a song or singer's name, if you write the word with the numeric keys on the screen, the screen ICON will move to a similar or the required song or singer's name.
- ④ Locate the desired song in the screen menu by pressing the **PAGE** ▲ ▼ keys or **general** ▲ ▼ keys.
- ⑤ Once you have found the desired song, start or book the song by pressing the **PLAY** or **ENTER** keys.
- ⑥ If want to book other songs, please repeat steps 2 to 5.
- ⑦ To exit word search mode, press **W.SEARCH** again.
- ⑧ To exit the screen menu, press the **TITLE** key.



2. Favorite Song List

Favorite song list creation

- ① The system has 9 favorite song folders - numbered 1 to 9. You can store up to **60 songs in each category**, giving a total storage capacity of **540 songs**.
- ② Press the **TITLE** key to open the screen menu in stop or playback mode.
- ③ Select the language of the desired song by pressing the **Blue** $\leftarrow \rightarrow$ keys.
- ④ Select the Alphabet or the First Character of the desired song by pressing the **ALPHABET** $\blacktriangle \blacktriangledown$ keys.
- ⑤ Locate the desired song from the screen menu by pressing the **PAGE** $\blacktriangle \blacktriangledown$ keys or **general** $\blacktriangle \blacktriangledown$ keys.
- ⑥ Once you selected the desired song, press numeric key between 1 and 9. eg if you press 1, you will store the selected song in the Favorite Song Folder - Category No 1, If you press 2, the selected song will be allocated to Favorite Song Folder - Category No 2, etc
- ⑦ If want to allocate other songs to your favorite folder, please repeat steps 2 to 6.
- ⑧ To exit the screen menu, press the **TITLE** key again.

Favorite song list deletion

- ① If you want to delete a song from one of your favorite song list folder, highlight the particular song in the folder and press the '0' key on the remote control to delete the song.



3. Booking songs – the two methods

You are able to book up to 99 songs for playback at any one time.

With screen menu

- ① Press the **TITLE** key to open the screen menu in stop or playback mode.
- ② Select the language of the desired song by pressing the **Blue** $\leftarrow \rightarrow$ keys.
- ③ Select the Alphabet or the First Character of the desired song by pressing the Alphabet $\blacktriangle \blacktriangledown$ keys.
- ④ Locate the desired song in the screen menu by pressing **Page** $\blacktriangle \blacktriangledown$ keys or **general** $\blacktriangle \blacktriangledown$ keys.
- ⑤ Once you have located the desired song, book the song by pressing the **ENTER** key.
- ⑥ If want to book other songs, please repeat steps 2 to 5.
- ⑦ To exit the screen menu, press the **TITLE** key again.
- ⑧ To cancel the reserved song, press the **CANCEL** key.



With Program menu

- ① Press the **PROGRAM** key to open the program menu in stop or playback mode.
- ② Having referred to the Song Book, enter the desired Song No. (via the number keys) and press the **ENTER** key to book the song.
- ③ To cancel a reserved song, select the desired song No on the program list (by pressing the **Blue** $\leftarrow \rightarrow$ keys) and press the **CANCEL** key.
- ④ To schedule songs in a certain order, move to the desired position of playback (moving around by pressing the **Blue** $\leftarrow \rightarrow$ keys) and insert the desired song No by repeating step 2.
- ⑤ To exit the program menu mode, press the **PROGRAM** key again.

